

Assembly Instructions

for

Life Guard Chair Display

Model:

Customer Assistance

Thank you for choosing the Life Guard Chair Display from Promotions Plus. We are committed to earning your satisfaction. Our customer service line is available 8:00am-4:30pm PST M-F.

1-805-541-5730

We would be pleased to answer any questions you may have during assembly and if necessary, replace any missing parts or parts that may have been damaged in shipment.

Assembly of the Life Guard Chair Display is straight forward. We suggest the following Tips:

- ◊ Please read the instructions and familiarize yourself with the parts & Sub Assemblies

First time assembly will take approximately 40 minutes

Tools Required

You will need the following tools to assemble this Display.

- ◆ #2 Phillips Screw Driver (Power Driver Recommended)

All holes are pre-drilled and assembly hardware is provided.

Unpacking

Your new Display has been shipped in 2 boxes.

Note:

Please inspect the contents to insure you have received all of the parts. Please insure that none were damaged during shipment. If any parts are damaged or missing please notify us immediately. We will file necessary claim with the carrier. Please save all packing material as the carrier may require for inspection.

CONTENTS

Life Guard Chair Display includes the following parts

- 3 Trays
- 1 Chair Bottom
- 1 Chair Back
- 1 Chair Back Brace
- 2 Chair Arms
- 2 Front Legs
- 2 Back Legs

See Pictures on Page 2

Hardware

- 18 Screws #10 x 3" PWH White
- 4 Screws #10 x 1½" PWH White

The Life Guard Chair Display is packaged to prevent shipping damage. To unpack, remove the cardboard and Plastic wrap holding the components together

After unpacking inspect all parts

Note:

Order of assembly is important. For easiest assembly, Please read instructions and follow each step in the order shown.


Orientation:

Left, Right, Front, Back, etc, are defined as viewed from the front of the display

Go to Step 1

Life Guard Chair Parts

Chair Bottom & Trays

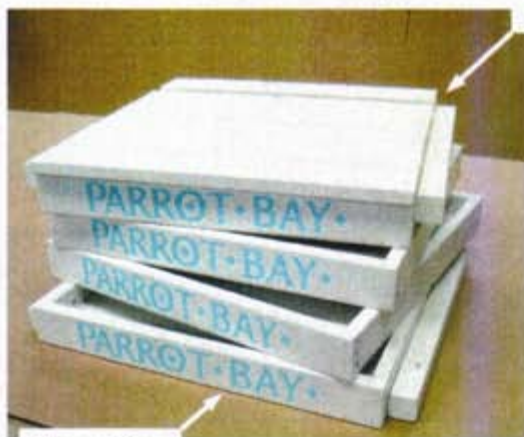


Chair Bottom

Chair Back



Bottom Tray

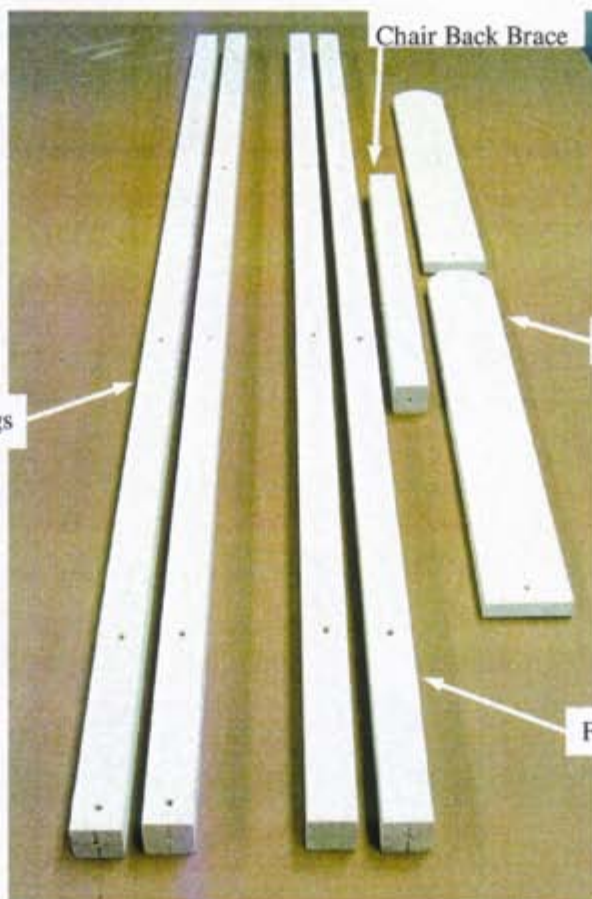

Back Legs

Chair Back Brace

Chair Arms

Front Legs

Step 1

Attach Back Legs

Back Legs are different from Front Legs. Back legs have extra hole at the top for the Chair Back Brace.

Position Legs & Trays as shown in Pictures 1.

Note Top & Bottom orientation of Legs. Bottom of Legs have Glides installed

Note Trays & Chair Bottom orientation (front side up).

Note the bottom tray is different from the other 2 trays.

Begin at the bottom, attach the first back leg to the Trays and Chair Bottom using #10 x 3" White Headed Screws

Add Chair Back Brace and secure with #10 x 3" White Headed Screw.

Note:

In order to insure the Trays & Chair Seat are properly positioned and square in the final assembly, Make sure all the screws through the Legs align exactly with the pre-drilled holes in the Trays & Chair Bottom.

See Pictures 2 & 3

TIP:

As you assemble each Leg, leave the screws loose until all of the screws are aligned with the pre-drilled holes in the Tray. This will allow enough room to visually align the screws to the Trays.

See Pictures 3 & 4

Tighten all Screws

Repeat for 2nd Back Leg

Go to Step 2

Step 2

Attach Front Legs

Roll Assembly over so that the front is face down.

See Picture 5.

Repeat process in Step 1 to attach the Front Legs.

Go to Step 3

Step 3

Install Chair Arms

Attach Chair Arms using #8 x 1¼" Screws.

Stand assembly Upright

Go to Step 4

Step 4

Install Chair Back

Install Chair Back as shown in Picture below


No screws required

!! CONGRATULATIONS !!

You have completed the assembly of the Life Guard



Life Guard Chair Assembly Pictures

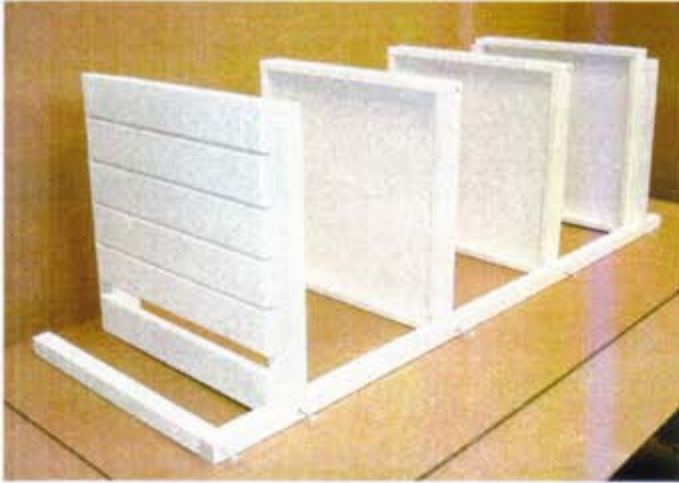


Picture 1



Picture 2



Picture 3

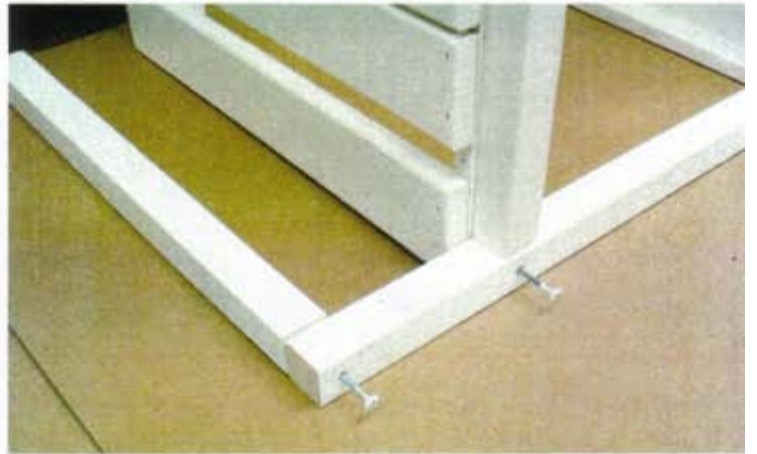

Picture 4



Picture 5